## 1 = OA: Outside Air intake 2 = SA: Supply Air to inside 3 = RA: Room Air to be exhausted 4 = EA: Exhaust Air to outside **AIRFLOW ORIENTATIONS INSTALLATION ORIENTATION** Unit must be installed in orientation (SIDE VIEW) shown. Parallel flow Crossflow NOTE: 1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE 1 NEAREST EIGHTH OF AN INCH. 2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE. 4 2 3. FILTERS REQUIRED ON UPSTREAM 260 1/2" SIDE OF CORES. 4. UNIT WILL SHIP DISASSEMBLED AND REQUIRES ON-SITE ASSEMBLY. Performance: Crossflow airflow orientations have best thermal performance 5. DUCT WORK SUPPLIED BY OTHERS. compared to parallel flow airflow. See IOM for details. 6. RA/EA AIRSTREAM CAN BE SWITCHED TO OA/SA AIRSTREAM. EACH AIRSTREAM IS REVERSIBLE. **TOP VIEW** 2" Minimum Installation Area 24" Minimum - 64 1/2" Service Area Typ. 85 1/2" Overall 80 3/8" Case - 5 1/8" SIDE VIEW FRONT VIEW

Model: SA4H8W

Drawing Type: Unit Dimension Version: SEP21

