

**BYPASS AIRFLOW SCHEMATIC  
TOP VIEW  
(OA/SA Airstream Not Shown)**

**ABBREVIATIONS**

EA: Exhaust Air to Outside  
 OA: Outside Air Intake  
 RA: Room Air to be Exhausted  
 SA: Supply Air to Inside  
 BP: Bypass Air Outlet

**INSTALLATION ORIENTATION**

Unit may be installed in any orientation.

**NOTE**

1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.


2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.

3. UNITS WITH BYPASS WILL REQUIRE ADDITIONAL SPACE FOR THE CONNECTION OF THE BYPASS DUCT (BY OTHERS).


4. FOR INSTALLATION DETAILS, REFER TO I&O MANUAL SUPPLEMENT FOR BYPASS.

5. BYPASS DAMPER SHIPPED LOOSE, FIELD INSTALLATION REQUIRED.


**TOP VIEW**

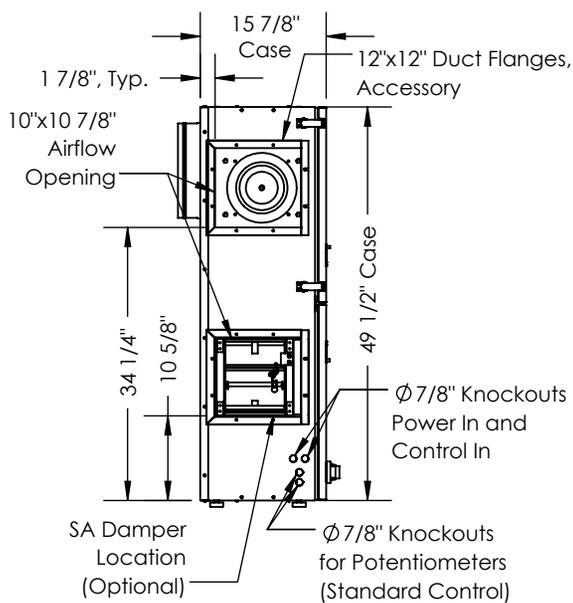

**LEFT VIEW**

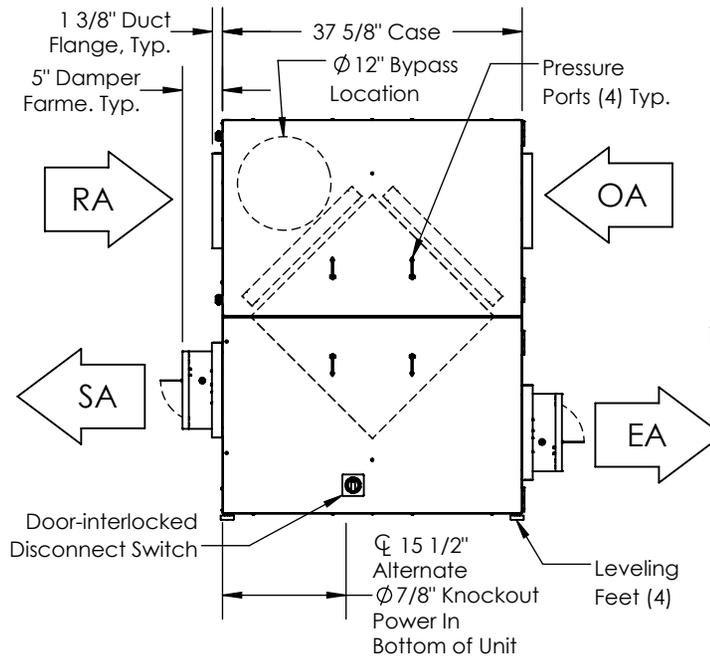

**FRONT VIEW**

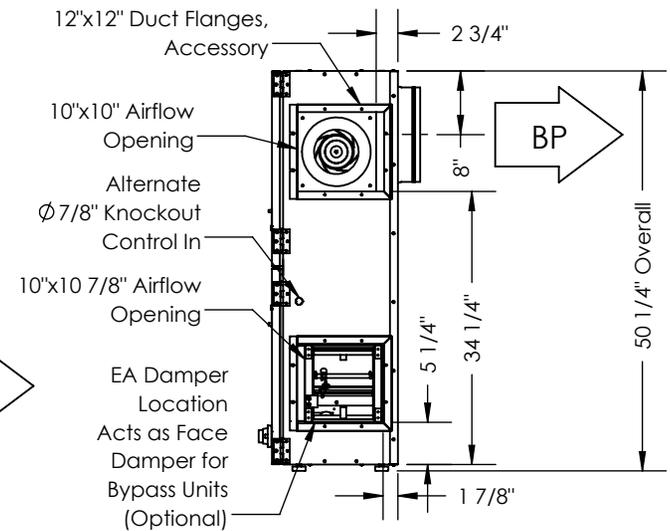

**RIGHT VIEW**