




TOP VIEW

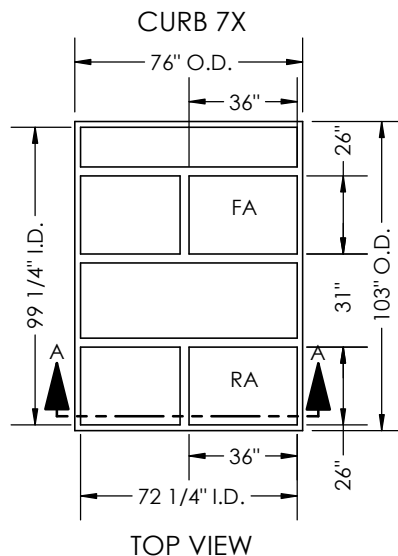


CURB CROSS-SECTION A-A (TYP.)

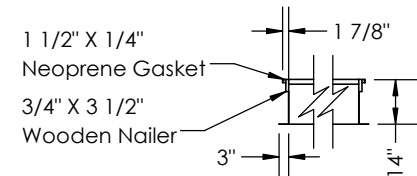


SECTION A-A

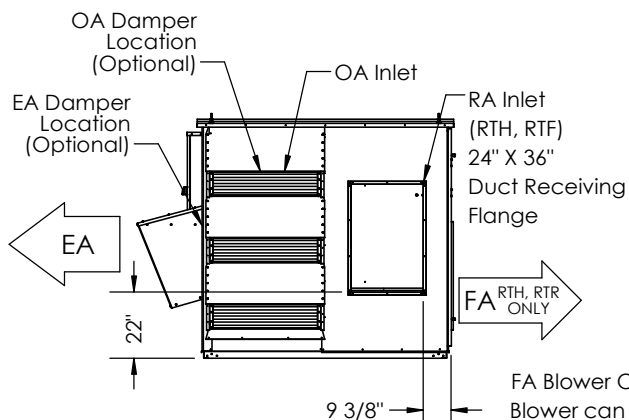

LEFT VIEW

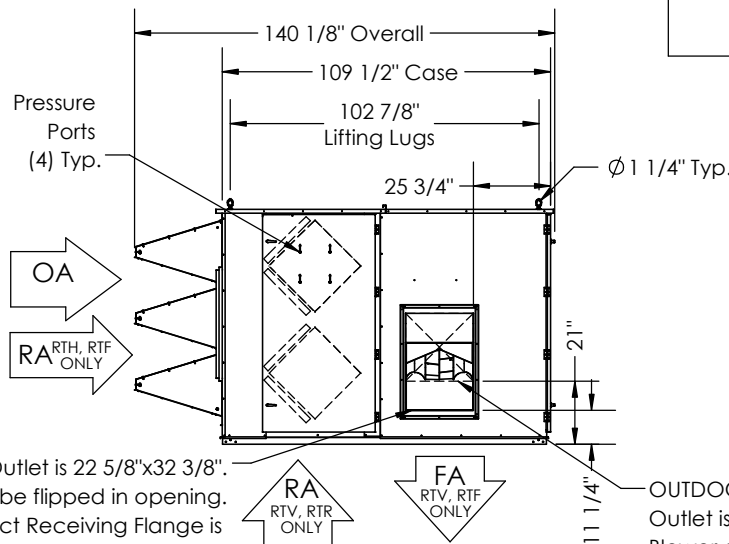

FRONT VIEW

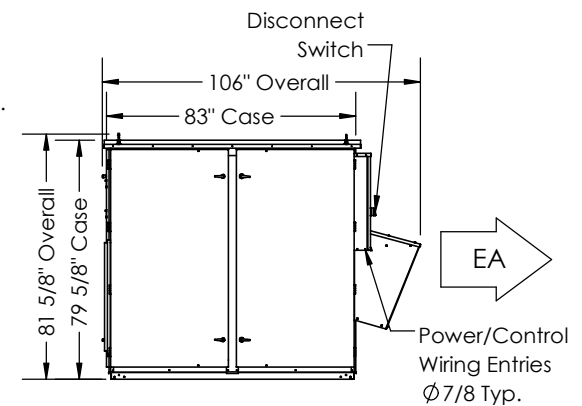

RIGHT VIEW

ABBREVIATIONS

EA: Exhaust Air to outside
 OA: Outside Air intake
 RA: Room Air to be exhausted
 FA: Fresh Air to inside
 RTV: Rooftop Vertical RA & FA
 RTF: Rooftop Vertical FA Only
 RTR: Rooftop Vertical RA Only
 RTH: Rooftop Horizontal RA & FA

INSTALLATION ORIENTATION

Unit must be installed in orientation shown.

NOTE:

1. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE ROUNDED TO THE NEAREST EIGHTH OF AN INCH.

2. SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT NOTICE.